HOME
DECORATORS
C O L L E C T I O N

HDC# 09206 MFG# TW-18540WE / TW-18540EO
REFLECTIONS BATH VANITY 35"Hx48"Wx22"D

ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.

Made In China

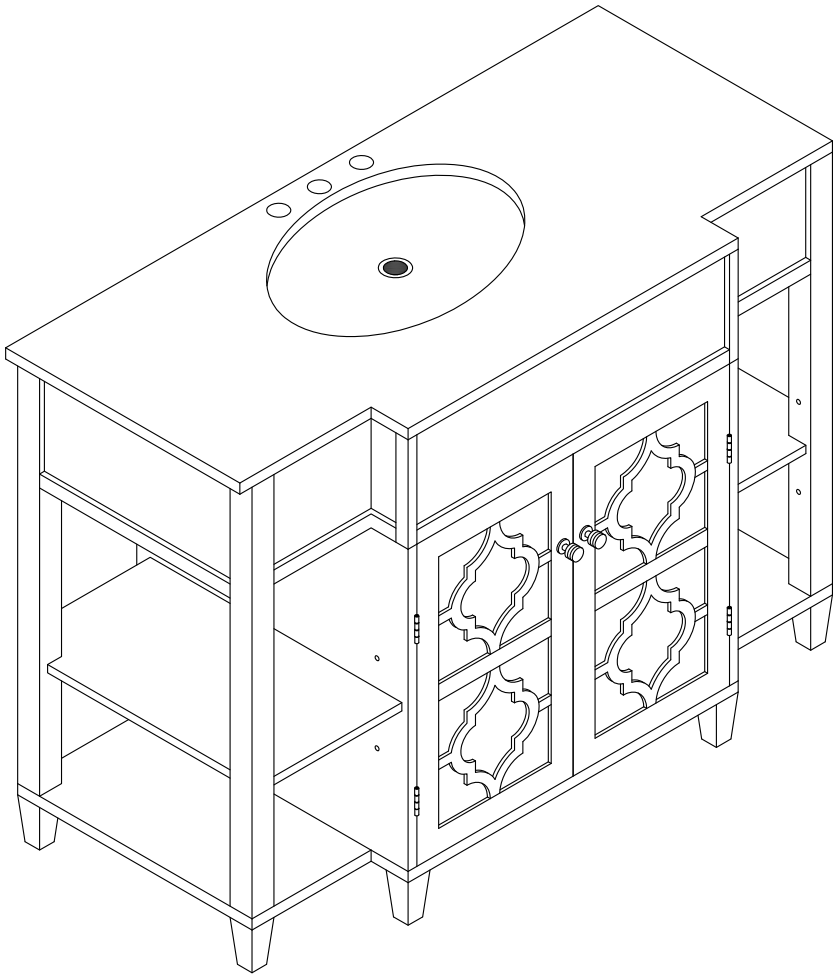

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. Following instruction listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

ASSEMBLY TOOLS REQUIRED

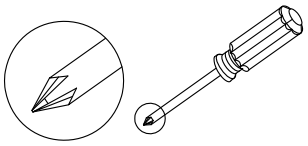

"+"Screw driver

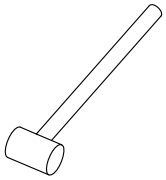

Rubber Mallet

Electric drill

WOODEN DOWEL INSTALLATION PROCEDURE

(1) FILL HOLE 1/4 FULL OF GLUE.
(2) GENTLY TAP DOWEL INTO HOLE
WITH RUBBER MALLET OR USE HAND
PRESS IN.
DO NOT USE HAMMER
(3) WIPE AWAY EXCESS GLUE.

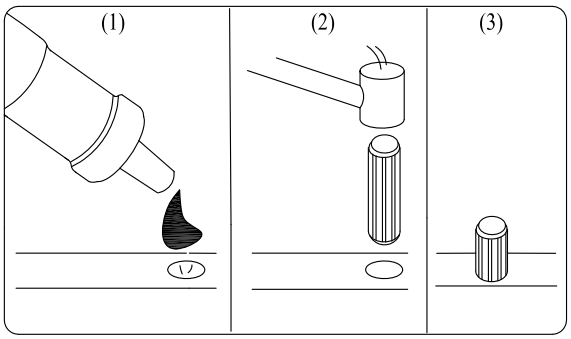

HIDDEN CONNECTOR ASSEMBLY TECHNIQUES FOR LOCK NUT & LOCK PIN

1 SET INCLUDES: (C) CAM-LOCK 1PC. (A) CAM BOLT 1PC.
TOOL NEEDED: ″+″ SCREW DRIVER
STEP 1: SCREW CAM BOLT (A) ONTO PRE-SET PLASTIC NUT ON PANEL. USE A ″+″ SCREW-DRIVER FOR TIGHTENING. ATTENTION: DO NOT OVER TIGHTEN THE CAM BOLT (A).
STEP 2: ATTACH BOTH PANELS, MAKE SURE YOU HAVE INSERTED THE CAM BOLT TO THE VERY DEPTH OF THE HOLE WITH RUBBER MALLET GENTLY, CAUTION: DO NOT USE HAMMER. THEN INSERT CAM-LOCK (C) INTO PRE-DRILLED HOLE ON PANEL, MAKE SURE THE ARROW ON CAM-LOCK (C) SET IN PANEL POINT TOWARD THE HOLE INTO WHICH THE CAM BOLT (A) HAS BEEN INSERTED AND INSERTED THE CAM-LOCK (C) TO THE VERY DEPTH OF THE HOLE.
STEP 3: ROTATE THE CAM-LOCK (C) CLOCKWISE TO SECURE CAM BOLT (A) BY TIGHTENING WITH A ″+″ SCREWDRIVER.

DETAIL STEP PLEASE SEE THE BELOW PICTURE.

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS, WHICH MAY HAVE CAME LOOSE INSIDE THE CARTON DURING SHIPMENT. COUNT ALL PARTS AND MATERIAL HARDWARE, COMPARE WITH PARTS LIST TO BE SURE ALL PART ARE PRESENT. IF ANY PARTS ARE MISSING OR DAMAGED, PHONE, FAX OR MAIL TO OUR CUSTOMER SERVICE DEPARTMENT. FOR EFFICIENT AND SPEEDY SERVICE, PLEASE INDICATE THE MODEL NUMBER AND CODE LETTER OF THE PART NEEDED.

IMPORTANT NOTE: FOLLOW INSTRUCTIONS LISTED BELOW IN PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

HARDWARE LIST

WOOD DOWEL 22 PCS  Ø8 x 30mm (1)	ROUND HEAD BOLT FLAT WASHER SPRING WASHER 19 SETS  Ø6 x 32mm (2)	ROUND HEAD BOLT FLAT WASHER SPRING WASHER 4 SETS  Ø6 x 70mm (3)	KNOB BOLT 2 SETS Ø3 x 19mm (4)
HINGE FLAT HEAD SCREW 4 SETS 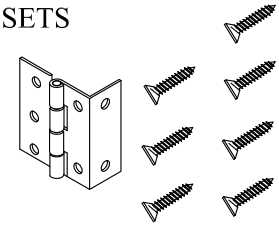 Ø3 x 12mm (5)	MAGNET LOCK ROUND HEAD SCREW 1 SET  Ø3 x 12mm (6)	IRON SLICE FLAT HEAD SCREW 2 SETS Ø3 x 6mm (7)	ROUND HEAD SCREW 20 PCS  Ø3 x 12mm (8)
SHELF HOLDER FLAT HEAD SCREW 12 PCS 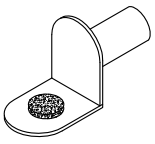 (9)	DRAINER 1 SET 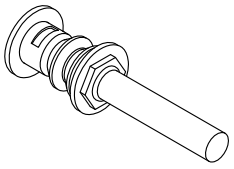 (10)	ALLEN KEY 1 PC  (11)	GLUE 1 PC  (12)

PARTS LIST

BOTTOM PANEL 1 PC 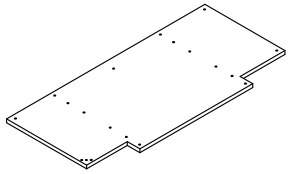 A	LEG 3 PCS  B	LEG 4 PCS  C
LEFT SIDE PANEL 1 PC  D	RIGHT SIDE PANEL 1 PC 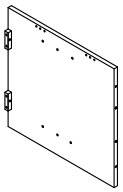 E	LEG 2 PCS 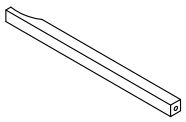 F
LEG 2 PCS  G	TOP FRAME 1 PC 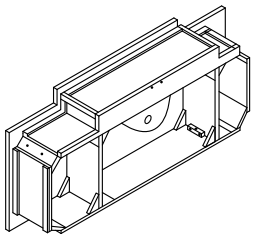 H	BACK PANEL 1 PC  I
BACK PANEL 1 PC  J	LEFT DOOR 1 PC 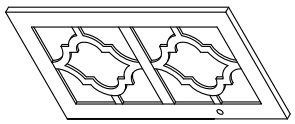 K	RIGHT DOOR 1 PC 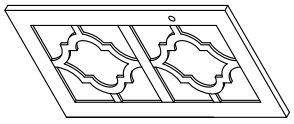 L
SHELF 1 PC 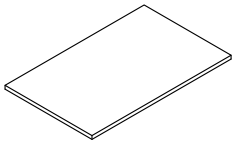 M	SHELF 2 PCS  N	

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

STEP 1: ASSEMBLE DRAINER (10)

• INSTALL DRAINER (10) INTO THE BASIN PROPERLY AS SHOWN.

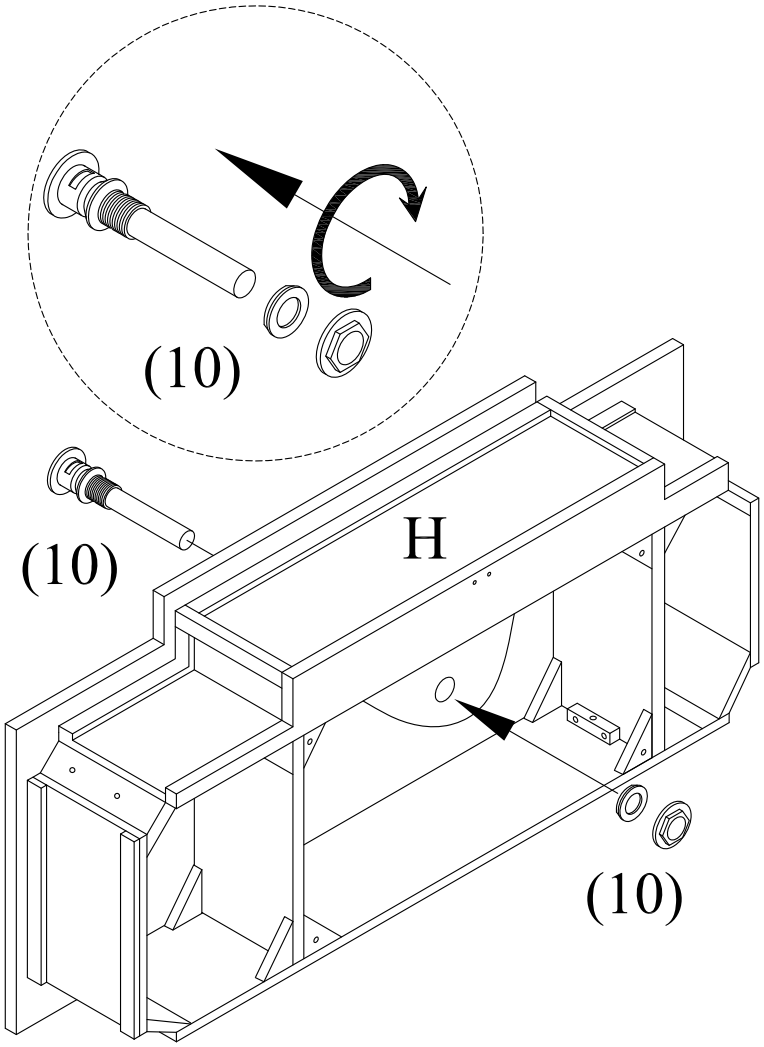

STEP 2: ASSEMBLE TOP FRAME (H) AND LEG (F & G)

• INSERT LEG (F & G) INTO RELEVANT CORNERS OF TOP FRAME (H) AS SHOWN.

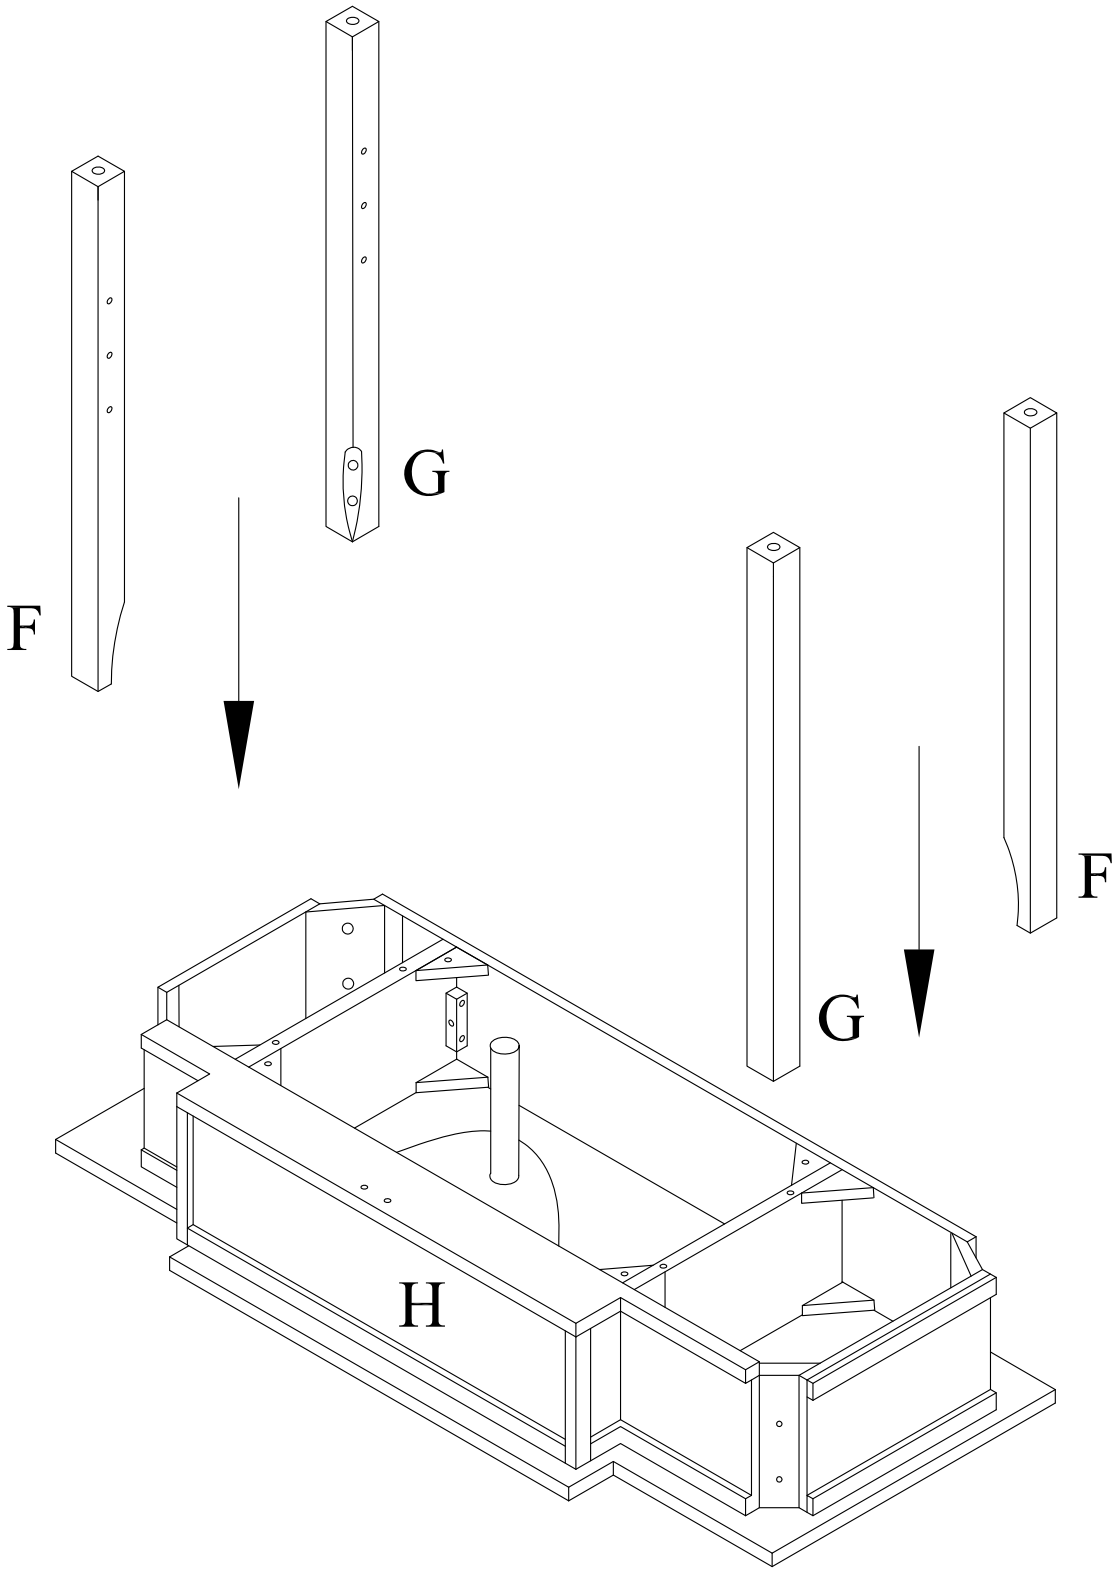

STEP 3: ASSEMBLE TOP FRAME (H) AND LEG (F & G)

- USE ROUND HEAD BOLT, SPRING WASHER AND FLAT WASHER (2) TO ASSEMBLE LEG (F & G) AND TOP FRAME (H) TOGETHER BY ALLEN KEY (11).

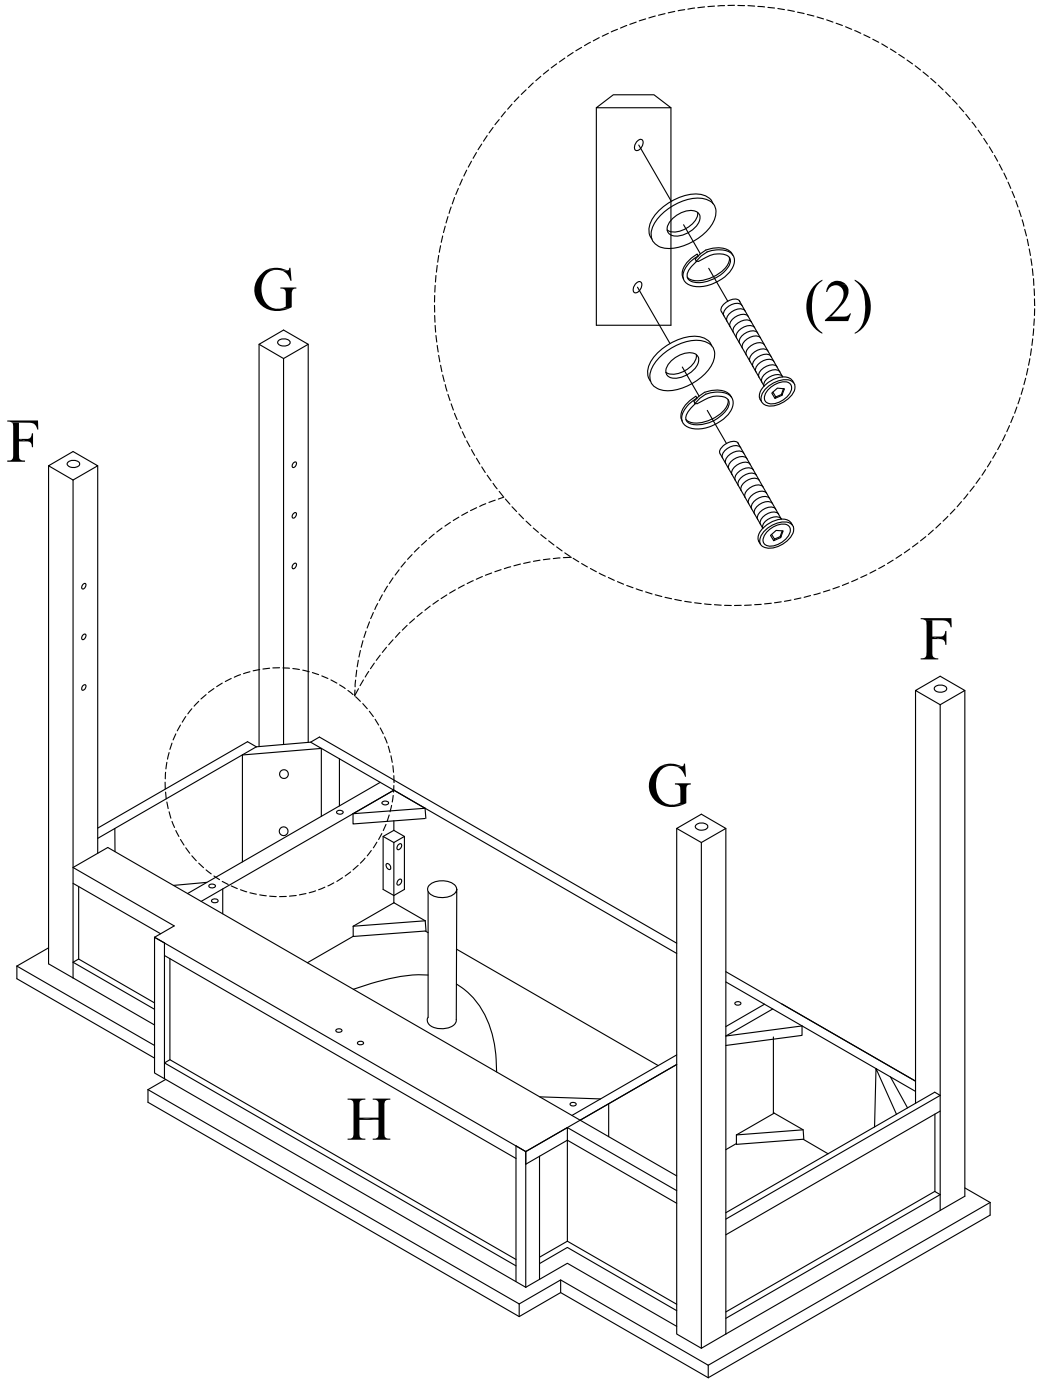

STEP 4: ASSEMBLE TOP PANEL (H) AND SIDE PANEL (D & E)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT, SPRING WASHER AND FLAT WASHER (2) TO ASSEMBLE SIDE PANEL (D & E) AND TOP PANEL (H) TOGETHER.

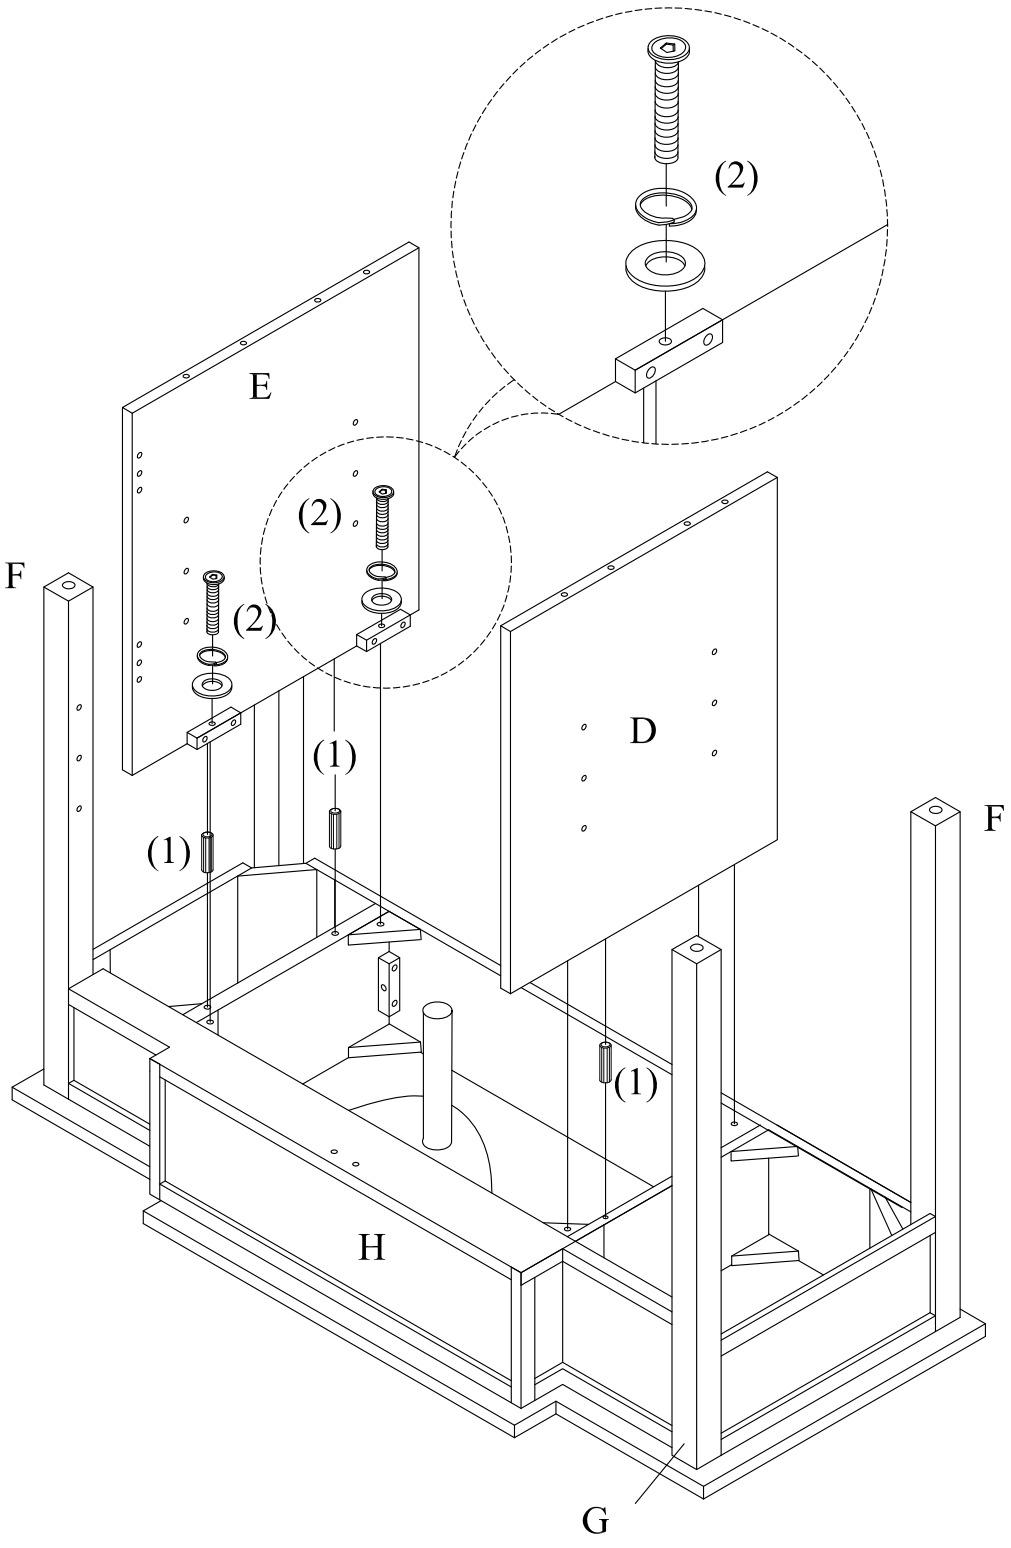

STEP 5: ASSEMBLE BOTTOM PANEL (A) AND LEG (B)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD SCREW, SPRING WASHER AND FLAT WASHER (2) TO ASSEMBLE BOTTOM PANEL (A) AND LEG (B) TOGETHER.

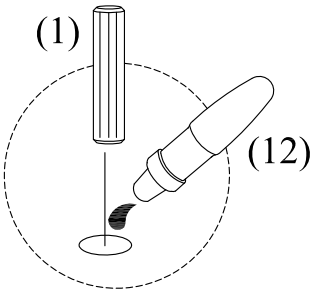

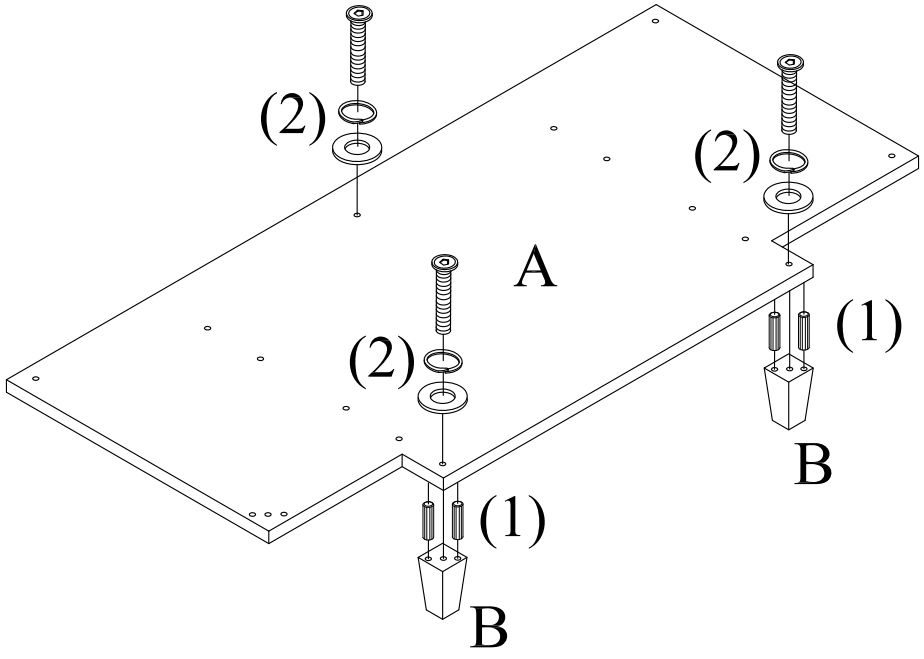

STEP 6: ASSEMBLE LEG (C & F & G) AND BOTTOM PANEL (A)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD SCREW, SPRING WASHER AND FLAT WASHER (2) TO ASSEMBLE BOTTOM PANEL (A) AND SIDE PANEL (D & E) TOGETHER.
- USE ROUND HEAD SCREW, SPRING WASHER AND FLAT WASHER (3) TO ASSEMBLE LEG (C & F & G) AND BOTTOM PANEL (A) TOGETHER AS SHOWN.

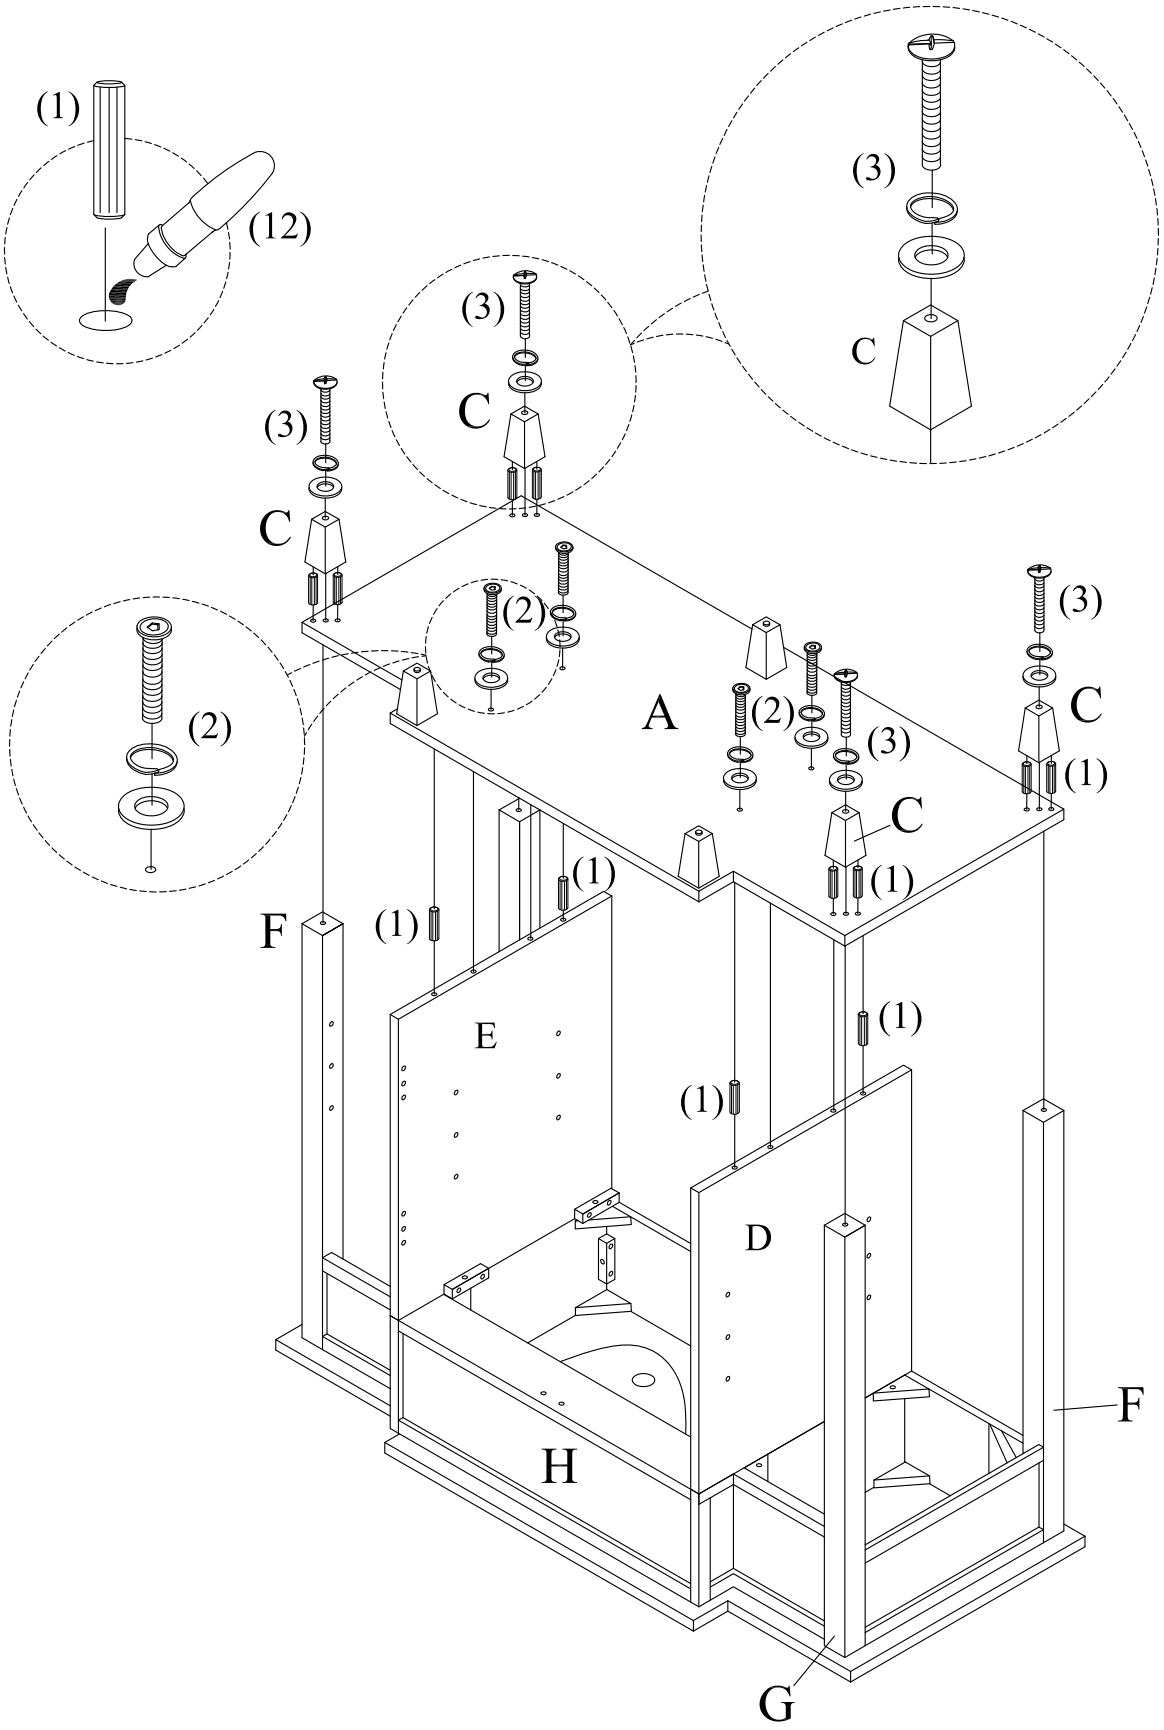

STEP 7: ASSEMBLE DOOR (K & L)

- USE FLAT HEAD SCREW (5) AND HINGE (5) TO ATTACH DOOR (K & L) ONTO SIDE PANEL (D & E).
- USE ROUND HEAD BOLT (4) TO ATTACH KNOB (4) ONTO DOOR (K & L).
- USE FLAT HEAD SCREW (7) TO ATTACH IRON SLICE (7) ONTO DOOR (K & L).
- USE FLAT HEAD SCREW (6) TO ATTACH MAGNET LOCK (6) ONTO TOP PANEL (H).

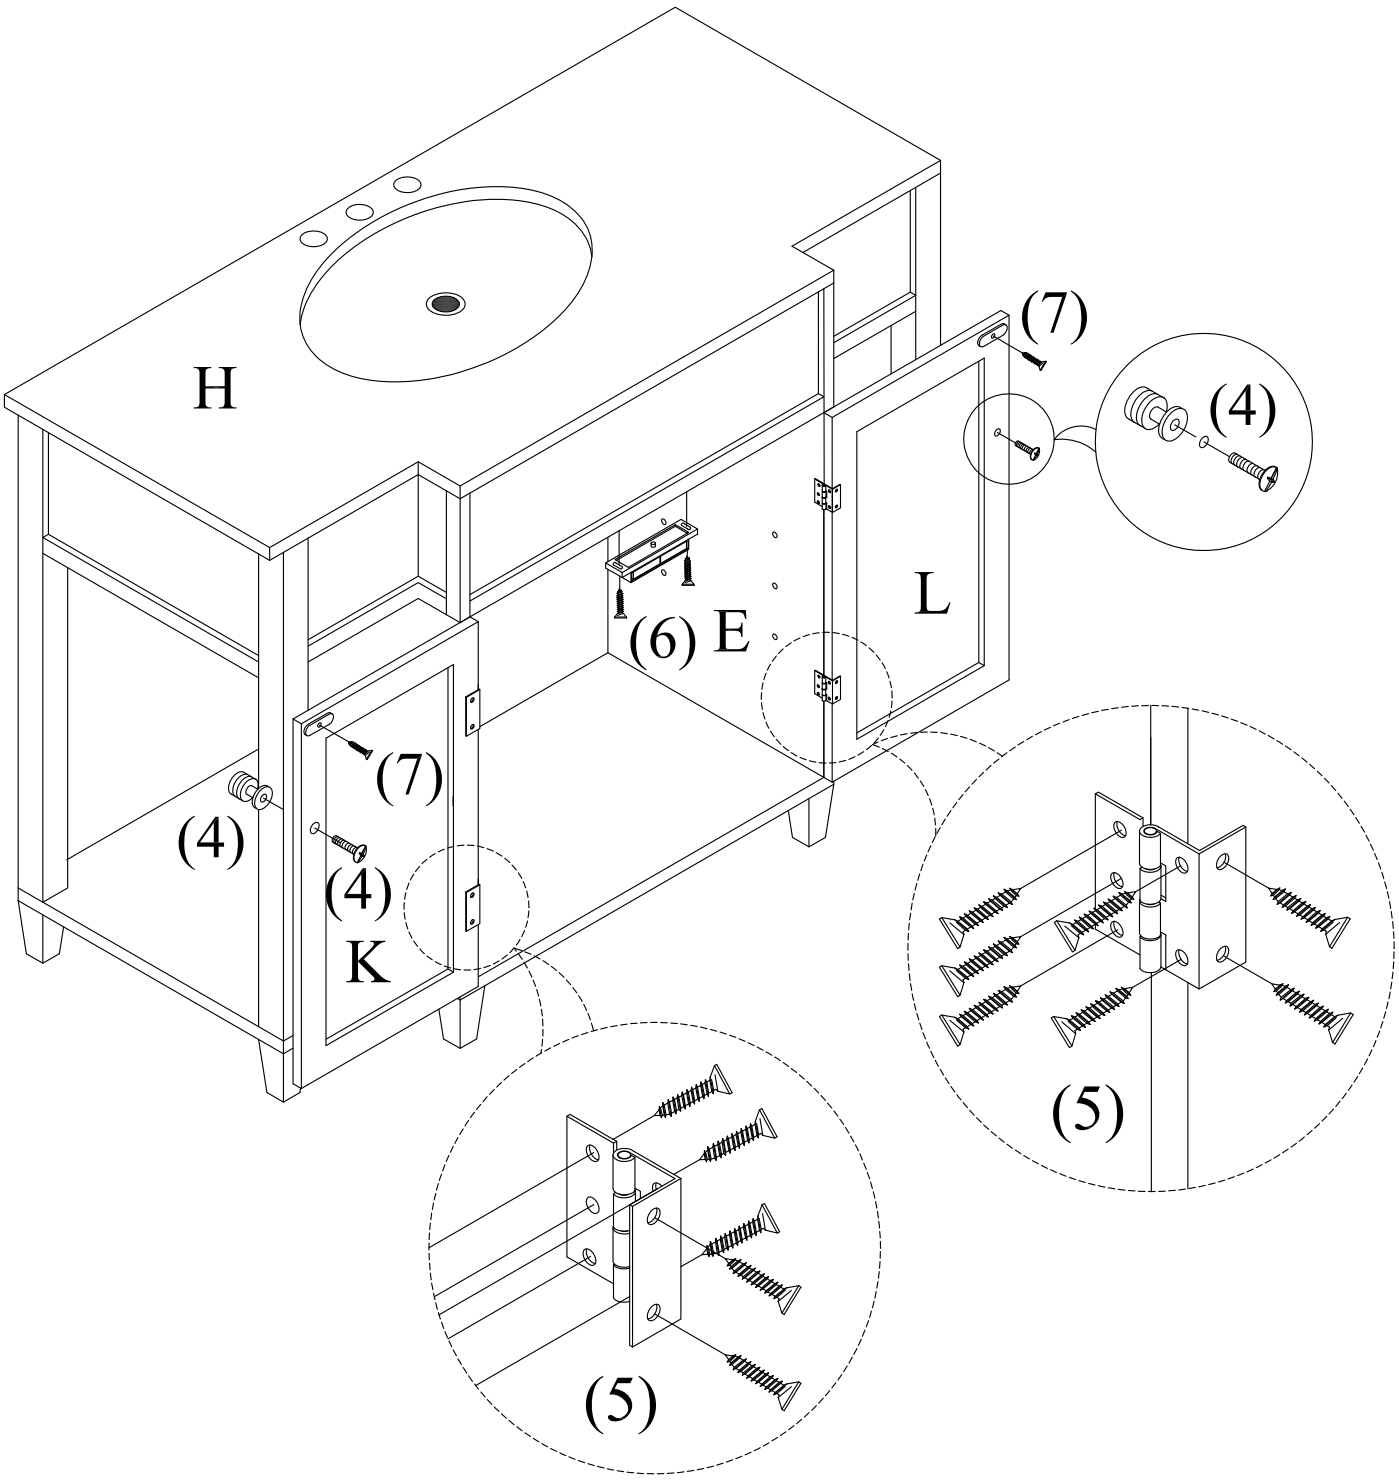

STEP 8: PLACE SHELF (M)

- INSERT SHELF HOLDERS (9) INTO THE HORIZONTAL HOLES INSIDE OF SIDE PANEL (D & E), THEN PUT SHELF (M) INSIDE.

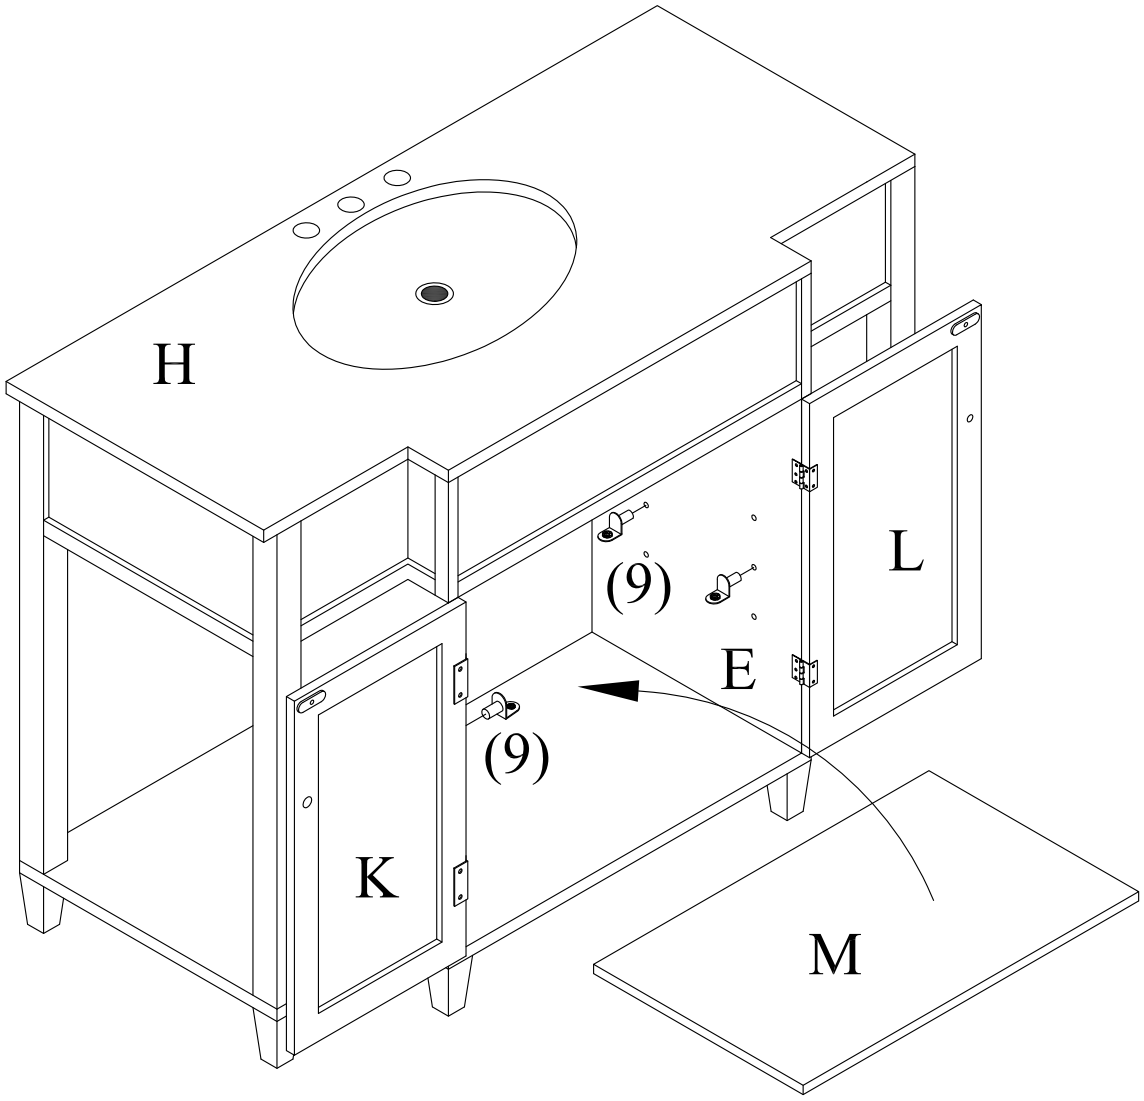

STEP 9: ASSEMBLE BACK PANEL (I & J)

- USE ROUND HEAD SCREW (8) TO ATTACH BACK PANEL (I & J) ON THE BACK OF PRE-ASSEMBLED UNIT.

NOTE: BEFORE YOU ASSEMBLE THE BACK PANEL, PLEASE MAKE SURE THE 2 SIDE PANELS AND DOORS HAVE AN EVEN GAP BETWEEN THEM. IF UNEVEN, SHIFT THE SIDE PANELS AND ADJUST DOORS UNTIL EVENLY SPACED, THEN ATTACH BACK PANEL.

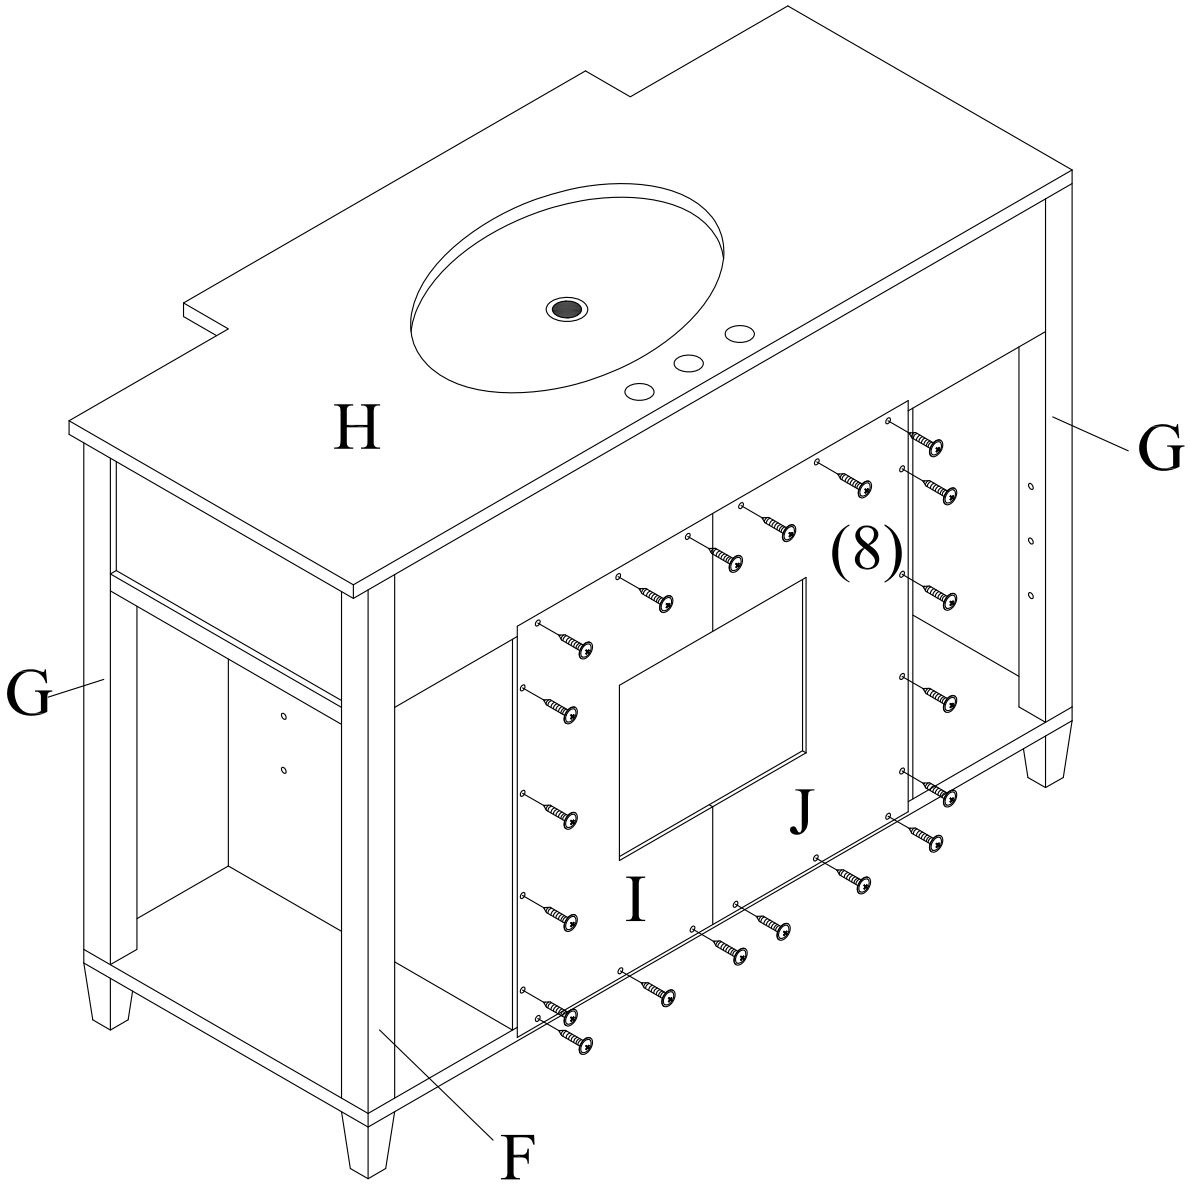

STEP 10: PLACE SHELF (N)

- INSERT SHELF HOLDERS (9) INTO THE HORIZONTAL HOLES INSIDE OF SIDE PANEL (D & E) AND LEG (F & G), THEN PUT SHELF (N) INSIDE.